



**BRINKS®**  
**TEMPLATE FOR HANDLESET INSTALLATION**  
**OUTSIDE SURFACE OF RIGHT HAND DOOR**

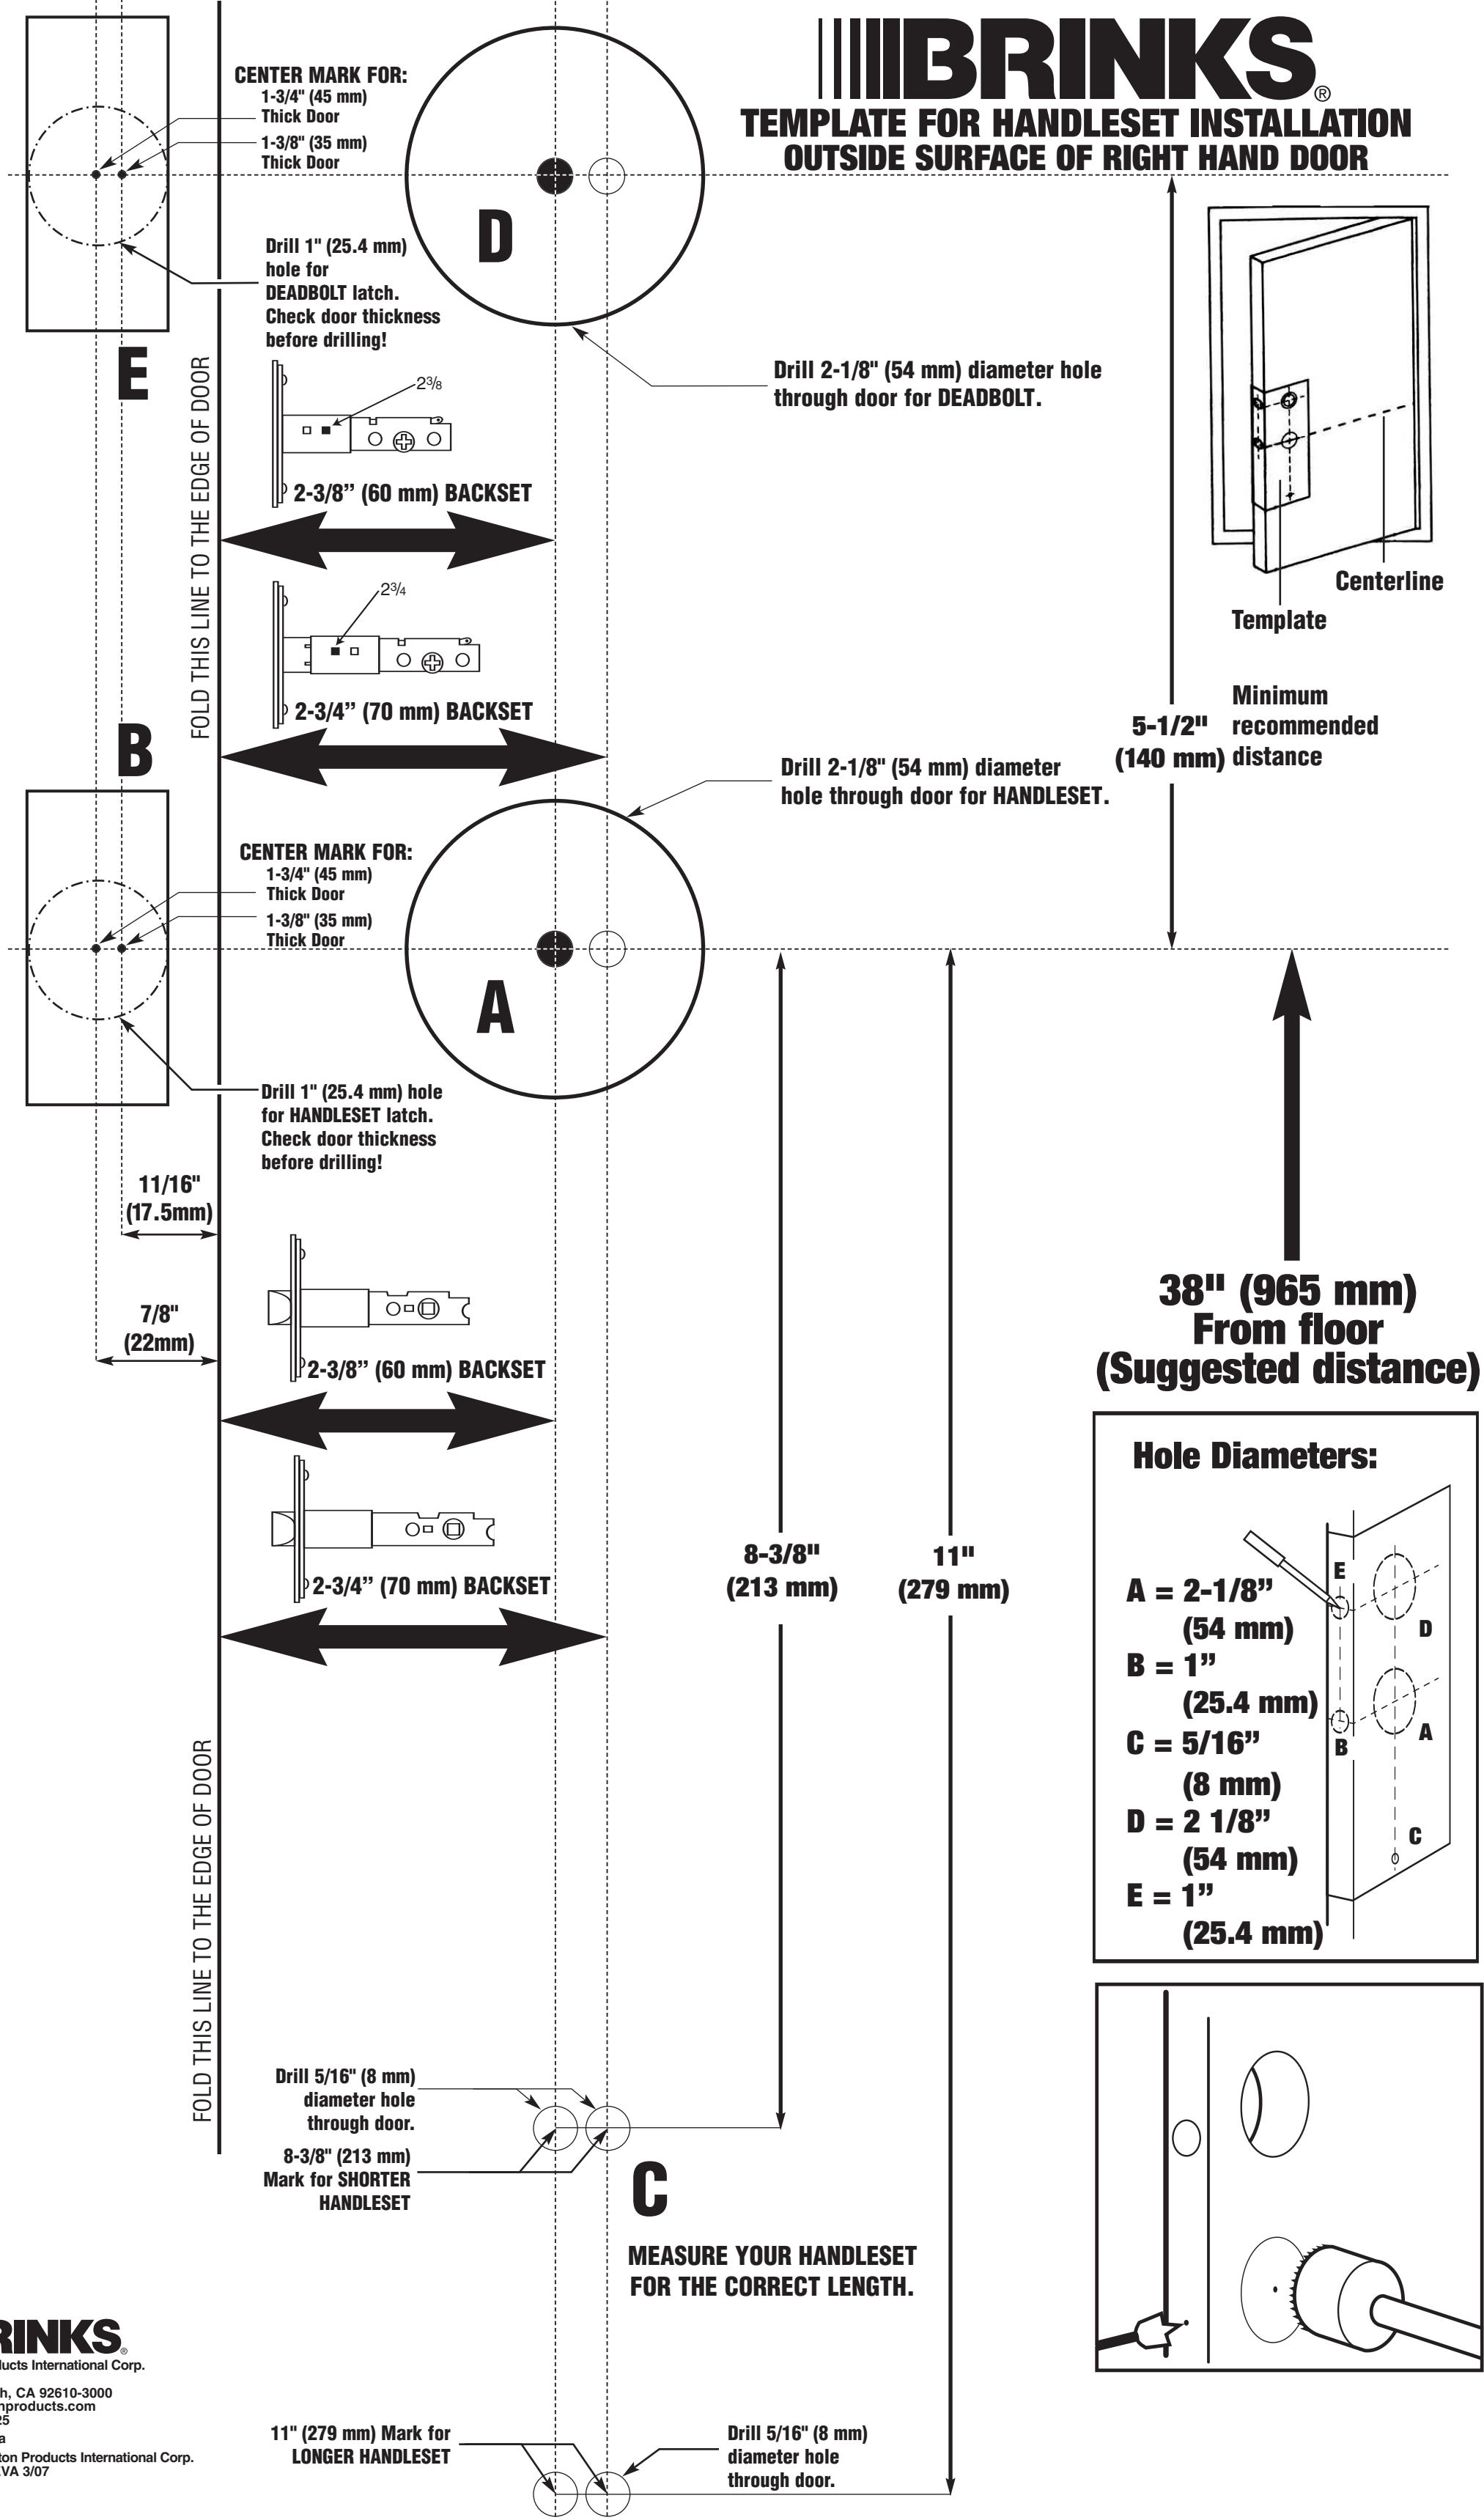


**CENTER MARK FOR:**  
1-3/4" (45 mm)  
Thick Door  
1-3/8" (35 mm)  
Thick Door

Drill 1" (25.4 mm)  
hole for  
DEADBOLT latch.  
Check door thickness  
before drilling!

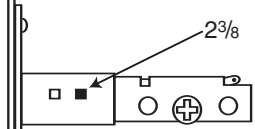

**2-3/8" (60 mm) BACKSET**

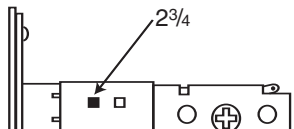


**2-3/4" (70 mm) BACKSET**

**CENTER MARK FOR:**  
1-3/4" (45 mm)  
Thick Door  
1-3/8" (35 mm)  
Thick Door


Drill 1" (25.4 mm) hole  
for HANDLESET latch.  
Check door thickness  
before drilling!

**11/16"**  
**(17.5mm)**

**7/8"**  
**(22mm)**

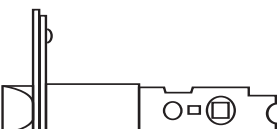

**2-3/8" (60 mm) BACKSET**

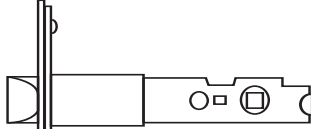

**2-3/4" (70 mm) BACKSET**

Drill 5/16" (8 mm)  
diameter hole  
through door.


**8-3/8" (213 mm)**  
Mark for SHORTER  
HANDLESET

**C**

**MEASURE YOUR HANDLESET**  
**FOR THE CORRECT LENGTH.**

**11" (279 mm) Mark for**  
**LONGER HANDLESET**

Drill 5/16" (8 mm)  
diameter hole  
through door.

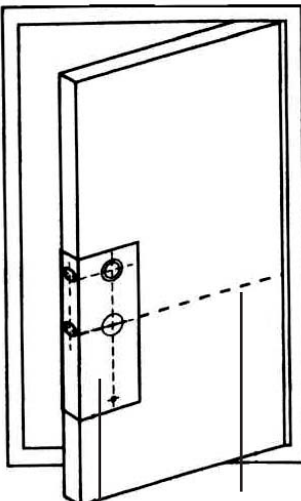



Centerline  
Template

Minimum recommended  
(140 mm) distance

**38" (965 mm)**  
**From floor**  
**(Suggested distance)**

**Hole Diameters:**


- A = 2-1/8"**  
**(54 mm)**
- B = 1"**  
**(25.4 mm)**
- C = 5/16"**  
**(8 mm)**
- D = 2 1/8"**  
**(54 mm)**
- E = 1"**  
**(25.4 mm)**

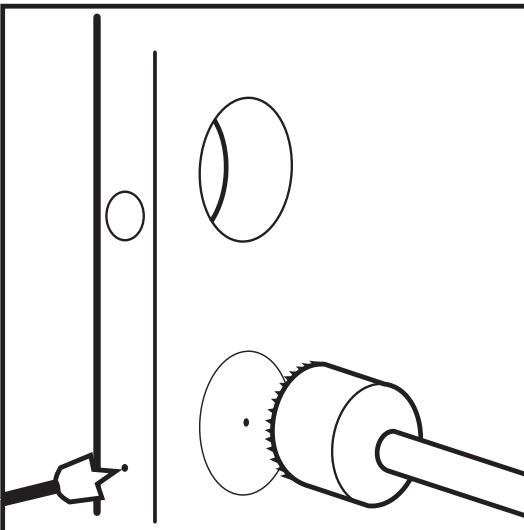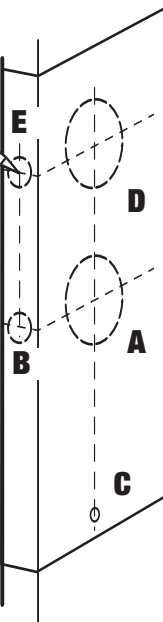

# BRINKS®

## TEMPLATE FOR HANDLESET INSTALLATION

### OUTSIDE SURFACE OF LEFT HAND DOOR


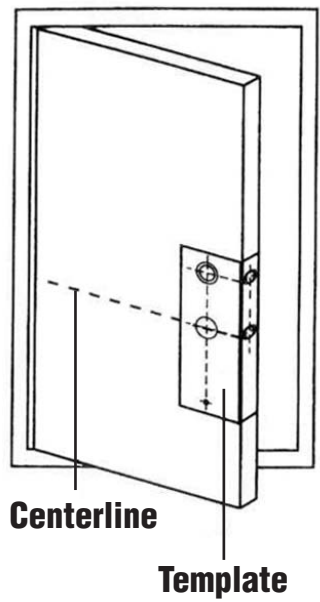


Minimum recommended distance **5-1/2" (140 mm)**

**38" (965 mm)**  
**From floor**  
**(Suggested distance)**

#### Hole Diameters:

**A = 2-1/8" (54 mm)**  
**B = 1" (25.4 mm)**  
**C = 5/16" (8 mm)**  
**D = 2 1/8" (54 mm)**  
**E = 1" (25.4 mm)**

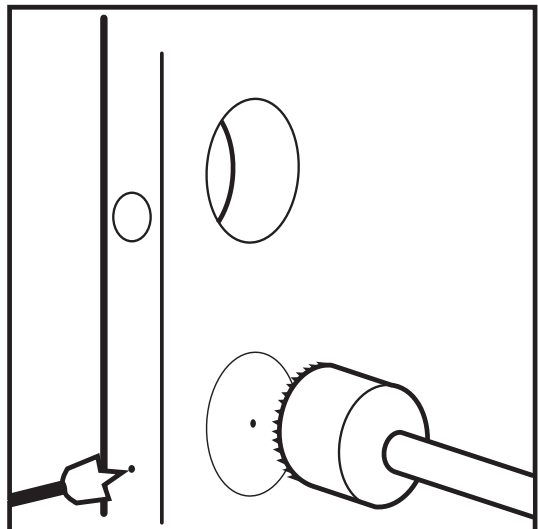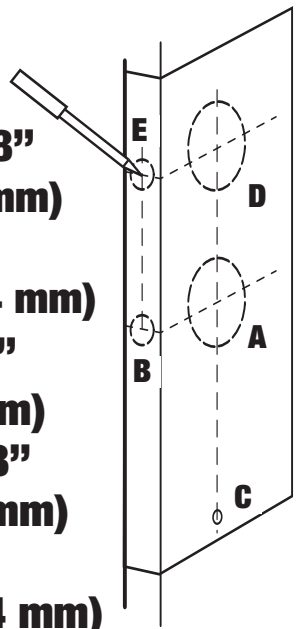

Drill 2-1/8" (54 mm) diameter hole through door for DEADBOLT.

Drill 2-1/8" (54 mm) diameter hole through door for HANDLESET.

**11" (279 mm)**

**8-3/8" (213 mm)**

**MEASURE YOUR HANDLESET FOR THE CORRECT LENGTH.**

**11" (279 mm) Mark for LONGER HANDLESET**

**C**

Drill 5/16" (8 mm) diameter hole through door.

**8-3/8" (213 mm) Mark for SHORTER HANDLESET**

**Drill 5/16" (8 mm) diameter hole through door.**

**2-3/8" (60 mm) BACKSET**

**2-3/4" (70 mm) BACKSET**

**2-3/8" (60 mm) BACKSET**

**2-3/4" (70 mm) BACKSET**

**CENTER MARK FOR:**

**1-3/4" (45 mm)**

**Thick Door**

**1-3/8" (35 mm)**

**Thick Door**

**Drill 1" (25.4 mm)**

**hole for**

**DEADBOLT latch.**

**Check door thickness before drilling!**

**2-3/8**

**2-3/4**

**CENTER MARK FOR:**

**1-3/4" (45 mm)**

**Thick Door**

**1-3/8" (35 mm)**

**Thick Door**

**Drill 1" (25.4 mm)**

**hole for**

**HANDLESET latch.**

**Check door thickness before drilling!**

FOLD THIS LINE TO THE EDGE OF DOOR

FOLD THIS LINE TO THE EDGE OF DOOR

**11/16" (17.5mm)**

**7/8" (22 mm)**